

MGA Lucas Equipment Part Numbers

Unit	Year	Part No.
Battery	1956-59	SG9E
	1960	STGZ9E
Bulb holder, panel light	1960	554734
Bulb		987
Coil, Ignition	1956-60	*45054D/M
Control box	1956-1959	37182A/H
"	Later 1959	37182J
"	1960	37183K
(twin cam)	1960	37182K&L
Distributor		
"	Later 1956-59	40510A
"	1959-60	40510B/D & F
"	1960	40510E&H
(twin cam)	1960	40718A
Flasher Unit	1957-60	35010A
Fuse box	1956-60	033239
Generator		
(twin cam)	1958-1960	22295A
Horn		
Low Note	Later 1955-60	69046A/F
High note	Later 1955-60	69047A/F
Horn Push	1954-60	76205A/D

LAMPS

Flasher, Rear	1960	52337A
	USA 1960	54600D
Fog (optional)	1954-60	55128B
	Later 1960	55128E
Head, Home	1956-59	51344B
	Later 1959-60	51344D/F
Head, Export		
R.H.D., dip left	1955-59	51344B
	Later 1959-60	51344D/F
L.H.D., dip right	1956-60	*51345D/F
Head, Export Europe		
(not France)	1954-59	51346B/E
(except France & Sweden)	Later 1959-60	58272A/B
Head, Export France	1956-59	51411B
	Later 1959-60	58273A/B

Lamps -- *continued*

Head, Export Sweden	1959-60	58451A/B
Head, Export U.S.A.	1954-60	51467A
	Later 1960	*58499A/B
Head, Export N. America (except U.S.A.)	1958-60	51533D/F
Map reading		
Cover	1957-60	563914
Lens	1956-60	573915
Gasket	1956-60	573916
Number plate illumination	1949-60	53093E/J
	Later 1960	53836B
Lamps, side and flasher	1956-59	*52216A
	1960	52425D
	USA 1960	52430E
Stop, tail, and flasher	1956-60	53330D
Mirror	L.H. 1956-60	062590
	R.H. 1956-60	062587
Relay, Flasher	1951-59	33117A/D
Relay, fog lamp	USA 1958-60	33169B
Relay, headlamp flasher (when fitted)	1959-60	33135B
Sleeve, Lucar connector		
14 amp	1960	54190042
35 amp.	1960	54190043
Starting Motor	1958-59	25022M
	1960	25022N/Q
Suppressor (When fitted)	1959	78106A

SWITCHES

Dipper	1953-60	81248A/D
Flasher	1953-60	31250A/H
Lever	1956-60	*311097
Foglamp	1956-60	31248B
Knob		312866
Headlamp flasher (When fitted)	1959-1960	31898A
Ignition	1956-60	*31499A/F
Lighting	1955-60	*31251A/E
Knob	1956-60	316154

Switches -- *continued*

Map Light	1956-60	*31515A
Knob		316102
Panel	1956-59	78311A
"	1960	78346A
Knob	1956-60	76894A
Starting Motor	1950-1960	76423A
Coupling		764428
Stop Lamp	1954-60	31082B/J
Windshield wiper	1956-60	*31515A
Knob		312865

Warning Lights

Flasher	1956-60	38132A
Ignition		
Bulb holder	1959-60	863511
Main beam bulb holder	1959-60	554734
Bulb	1959-60	987

Windshield wipers

Motor		1956-59	75297A/D
"	Later	1959-60	75297E
Wheelbox, less switch		1956-60	*72674A/B
Crosshead and rack assy.		1956-60	743221
Outer Casing			
Motor to wheel box		1956-60	743664
End tube		1956-60	740746
Ferrule, casing retaining		1956-60	740715
Grommet, wheelbox		1956-60	740811
Arm,			
" left hand drive	Later	1957-60	745083
" right hand drive	Later	1957-60	745082
Blade		1957-60	737910

* See Supersession Chart L.H.D. Left hand drive R.H.D. Right hand drive
L.H. Left Hand R.H. Right hand USA United States of America