


Wireless LAN Setup

1. 2 Computers, 1 Workgroup

Y Setup:

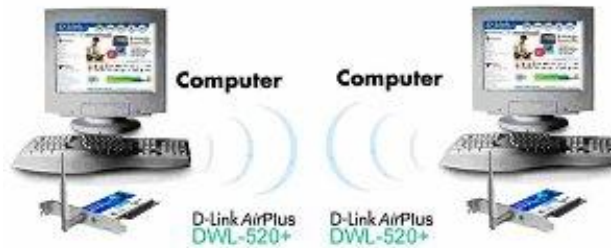

Y Procedure:

1. Install Wireless NIC to each of the two computers
(See the document: "Installation of Wireless Network Adapter" for instructions.)
2. Start **Configuration Utility** program by clicking on the utility icon (appear green if connected to a network) in system tray.
3. Configure the following network settings to be exactly the same on both computers:

Recommended Wireless Network Setting for Client-to-client:

- SSID : **bmetlab** (Name of the belonged wireless network group)
- Mode : **Ad-Hoc** (Connect without Access Point)
- Channel : **6** (Any desired number from 1 – 11)
- Tx Rate : **Fully Automatic** (Setting of connection speed)
- Preamble : **Long** (for DWL-520+ Adapter ONLY)
- Power mode : **Continuous** (for DWL-520+ Adapter ONLY)
- Encryption : **64 Bit WEP**
: **0123456789** (WEP Key#1)

2. 4 Computers, 1 Workgroup

Y Setup:



Y Procedure:

1. Install Wireless NIC to each of the four computers
(See the document: "Installation of Wireless Network Adapter" for instructions.)
2. Start **Configuration Utility** program by clicking on the utility icon (appear green if connected to a network) in system tray.
3. Configure the following network settings to be exactly the same on both computers:

Recommended Wireless Network Setting for Client-to-client:

- | | |
|---------------------|--|
| • <u>SSID</u> | : bmetlab (Name of the belonged wireless network group) |
| • <u>Mode</u> | : Ad-Hoc (Connect without Access Point) |
| • <u>Channel</u> | : 6 (Any desired number from 1 – 11) |
| • <u>Tx Rate</u> | : Fully Automatic (Setting of connection speed) |
| • <u>Preamble</u> | : Long (for DWL-520+ Adapter ONLY) |
| • <u>Power mode</u> | : Continuous (for DWL-520+ Adapter ONLY) |
| • <u>Encryption</u> | : 64 Bit WEP |
| | : 0123456789 (WEP Key#1) |

3. 4 Computers, 2 Workgroup

Y Setup:




Y Procedure:

1. Install Wireless NIC to each of the four computers
(See the document: "Installation of Wireless Network Adapter" for instructions.)
2. Start **Configuration Utility** program by clicking on the utility icon (appear green if connected to a network) in system tray.
3. Configure the following network settings to the two different groups of computers:

<i>Recommended Wireless Network Setting for Client-to-client:</i>		
Group 1 (Bmet1)	<ul style="list-style-type: none">• <u>SSID</u> : Bmet1 (Name of the belonged wireless network group)• <u>Mode</u> : Ad-Hoc (Connect without Access Point)• <u>Channel</u> : 6 (Any desired number from 1 – 11)• <u>Tx Rate</u> : Fully Automatic (Setting of connection speed)• <u>Preamble</u> : Long (for DWL-520+ Adapter ONLY)• <u>Power mode</u> : Continuous (for DWL-520+ Adapter ONLY)• <u>Encryption</u> : 64 Bit WEP key#1: 0123456789 (HEX)	
Group 2 (Bmet2)	<ul style="list-style-type: none">• <u>SSID</u> : Bmet2 (Name of the belonged wireless network group)• <u>Mode</u> : Ad-Hoc (Connect without Access Point)• <u>Channel</u> : 8 (Any desired number from 1 – 11)• <u>Tx Rate</u> : Fully Automatic (Setting of connection speed)• <u>Preamble</u> : Long (for DWL-520+ Adapter ONLY)• <u>Power mode</u> : Continuous (for DWL-520+ Adapter ONLY)• <u>Encryption</u> : 64 Bit WEP key#1: 0123456789 (HEX)	

4. 4 Computers with Access Point

Y Setup:

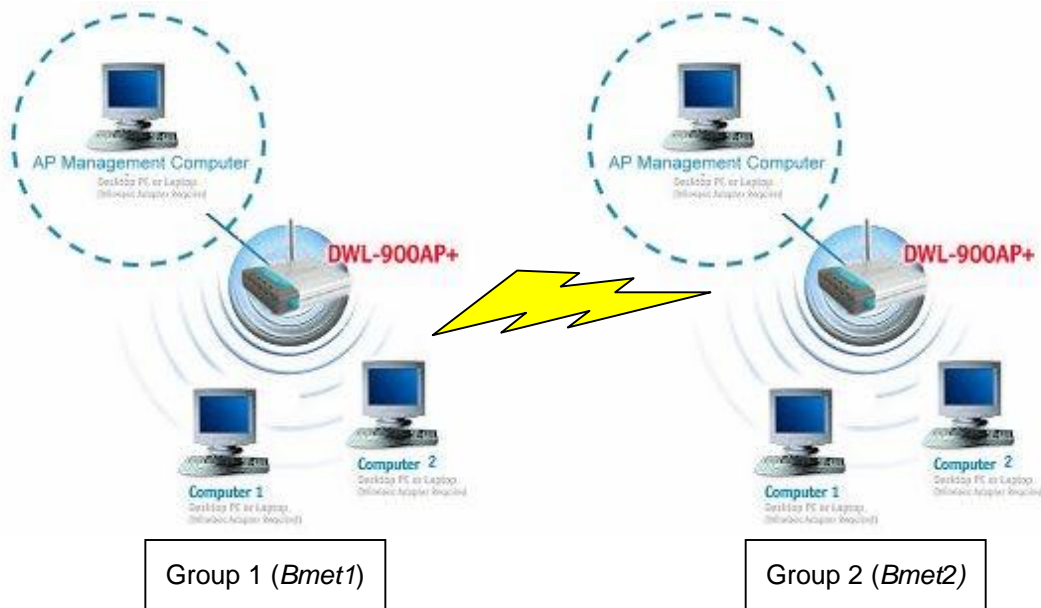

Y Procedure:

1. Configure each of the four computers as described in Setup #3, except changing the *Mode* to **Infrastructure**
2. Start **AP Manager** program (for DWL-1000AP) or access **AP Configuration Menu** (for DWL-900AP+) to change the AP setting.

è AP Manager: Start > Programs > D-Link Wireless LAN > D-Link AP manager

è AP Configuration Menu: Open Internet Explorer > <http://192.168.0.50> (default) or the **assigned IP address** for each AP.

- Configure the following network settings to the two different groups of computers:

<i>Recommended Wireless Network Setting for Client-to-client:</i>	
Group 1 (Bmet1)	<ul style="list-style-type: none"> • <u>AP Name</u> : BMET_AP1 (for DWL-900AP+ ONLY) • <u>SSID</u> : Bmet1 (Name of the belonged wireless network group) • <u>Channel</u> : 6 (Any desired number from 1 – 11) • <u>Encryption</u> : 64 Bit WEP key#1: 0123456789 (HEX) • <u>LAN IP</u> : Static IP Address: 100.100.100.1 : Subnet mask: 255.0.0.0 ; Gateway: 0.0.0.0 • <u>DHCP</u> : Disabled (for DWL-900AP+ Adapter ONLY) • <u>Adv. Mode</u> : Wireless Bridge (ONLY work with another dwl-900AP+) (dwl-900ap+) Otherwise, select Access Point / Repeater
Group 2 (Bmet2)	<ul style="list-style-type: none"> • <u>AP Name</u> : BMET_AP2 (for DWL-900AP+ ONLY) • <u>SSID</u> : Bmet2 (Name of the belonged wireless network group) • <u>Channel</u> : 8 (Any desired number from 1 – 11) • <u>Encryption</u> : 64 Bit WEP key#1: 0123456789 (HEX) • <u>LAN IP</u> : Static IP Address: 100.100.100.2 : Subnet mask: 255.0.0.0 ; Gateway: 0.0.0.0 • <u>DHCP</u> : Disabled (for DWL-900AP+ Adapter ONLY) • <u>Adv. Mode</u> : Wireless Bridge (ONLY work with another dwl-900AP+) (dwl-900ap+) Otherwise, select Access Point / Repeater